



GLITERA

HEAVY DUTY

OUTDOOR

VITRIFIED TILES

400 x 400 MM


Punch Series

www.gliteraceramic.com




07-1701



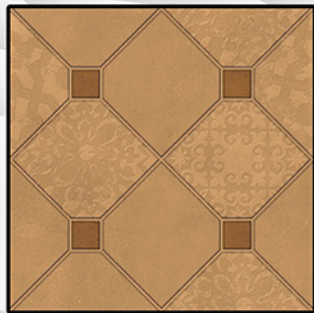


07-1702



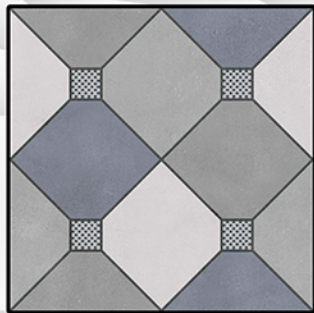

07-1703



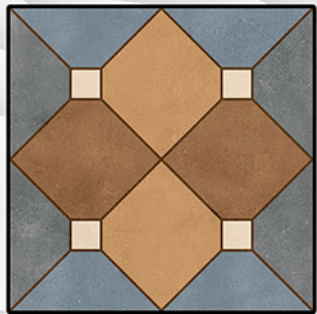


07-1704






07-1705



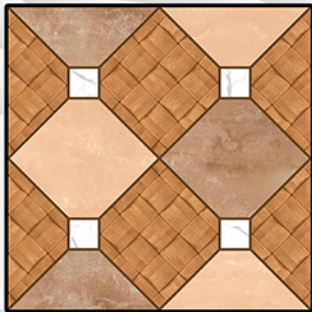

07-1706



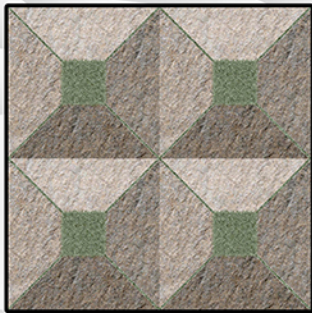

07-1707





07-1708





07-1709





07-1710





07-1711





07-1712






08-1801





08-1802



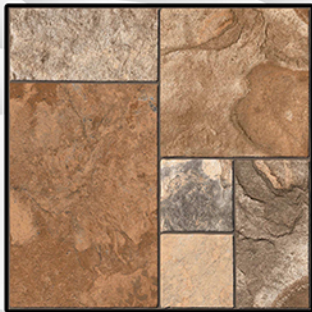

08-1803






08-1804






08-1805



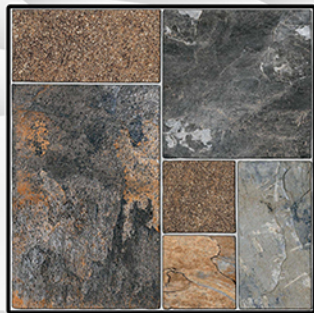

08-1806

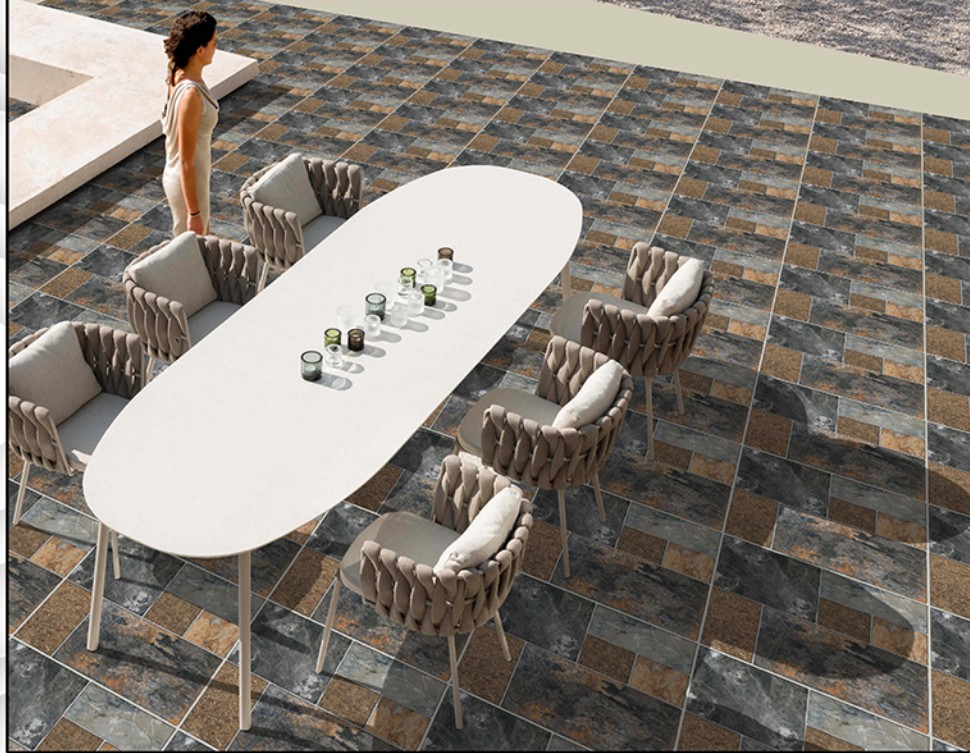



08-1807





08-1808






08-1809





08-1810

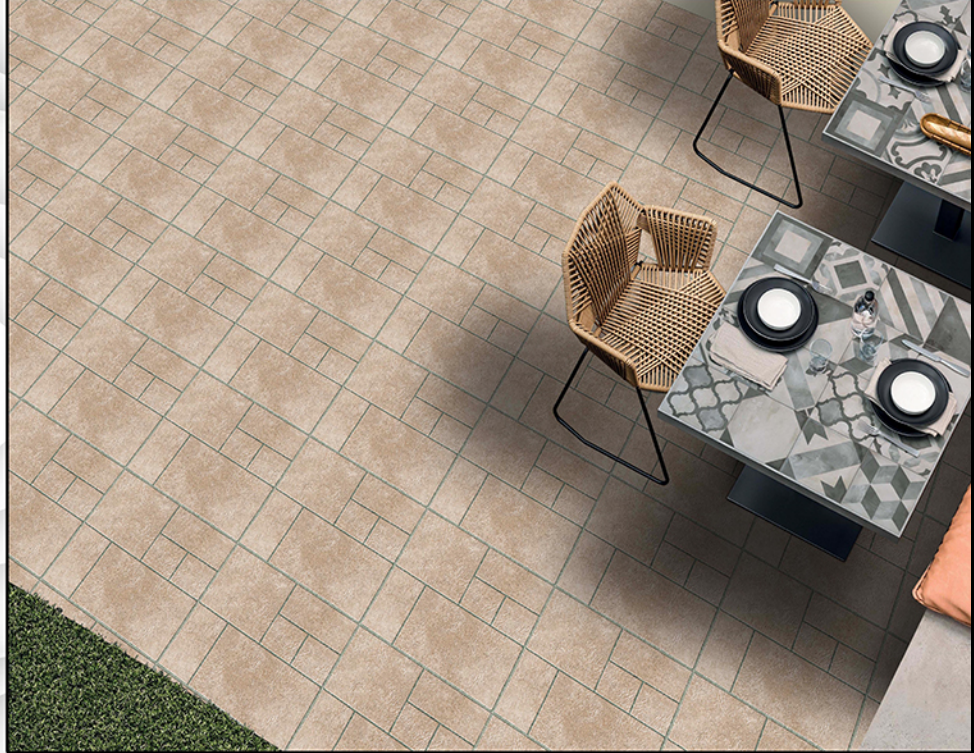



08-1811






08-1812





08-1813



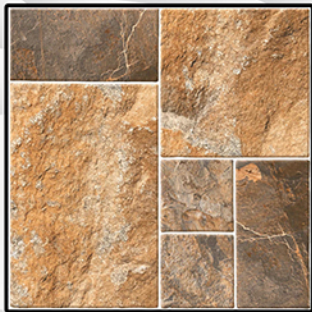


08-1814






08-1815



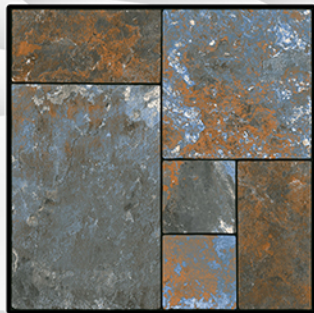


08-1816



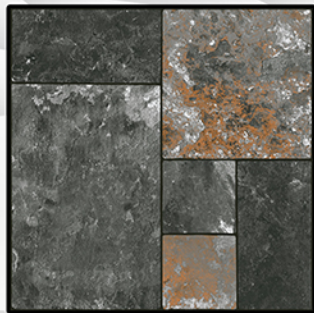

08-1817



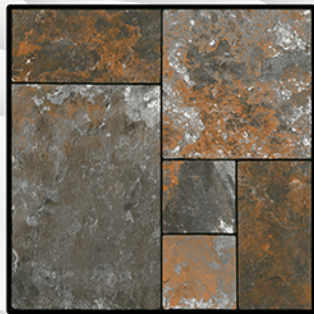


08-1818





09-1901



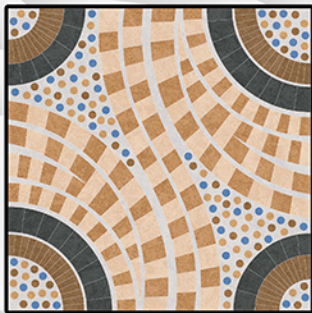

09-1902





09-1903





09-1904






09-1905





09-1906



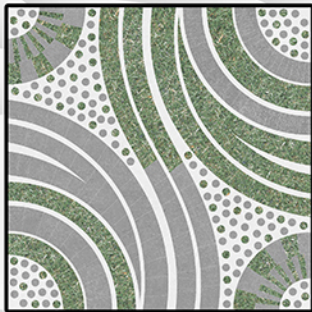


09-1907






09-1908



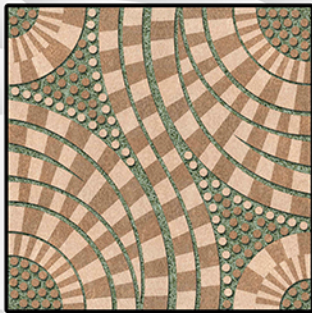



09-1909



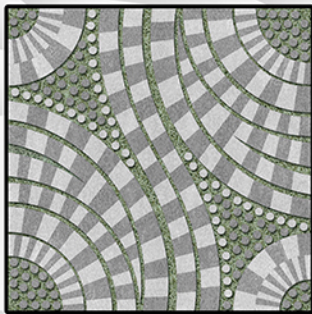


09-1910

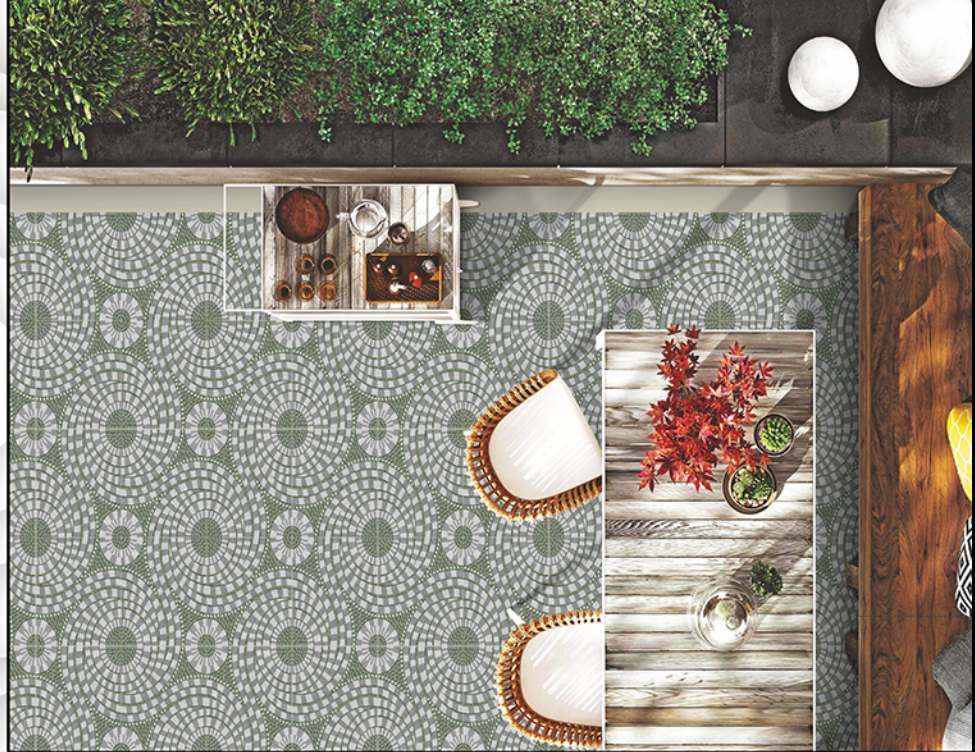

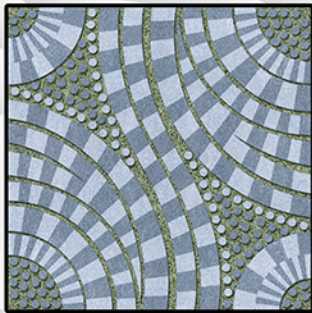


09-1911



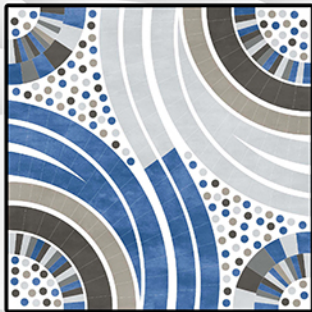

09-1912



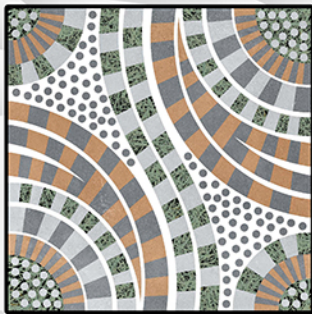


09-1913





09-1914



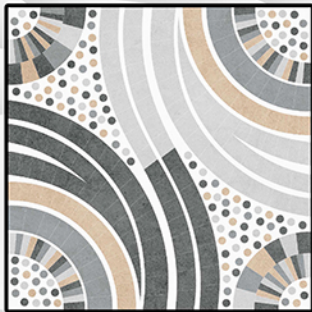


09-1915





09-1916



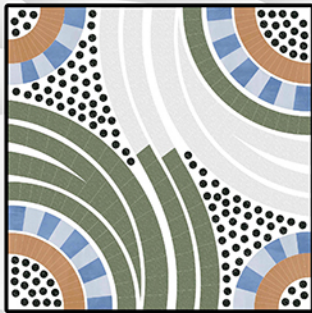

09-1917





09-1918





09-1919





09-1920





10-2001






10-2002






10-2003

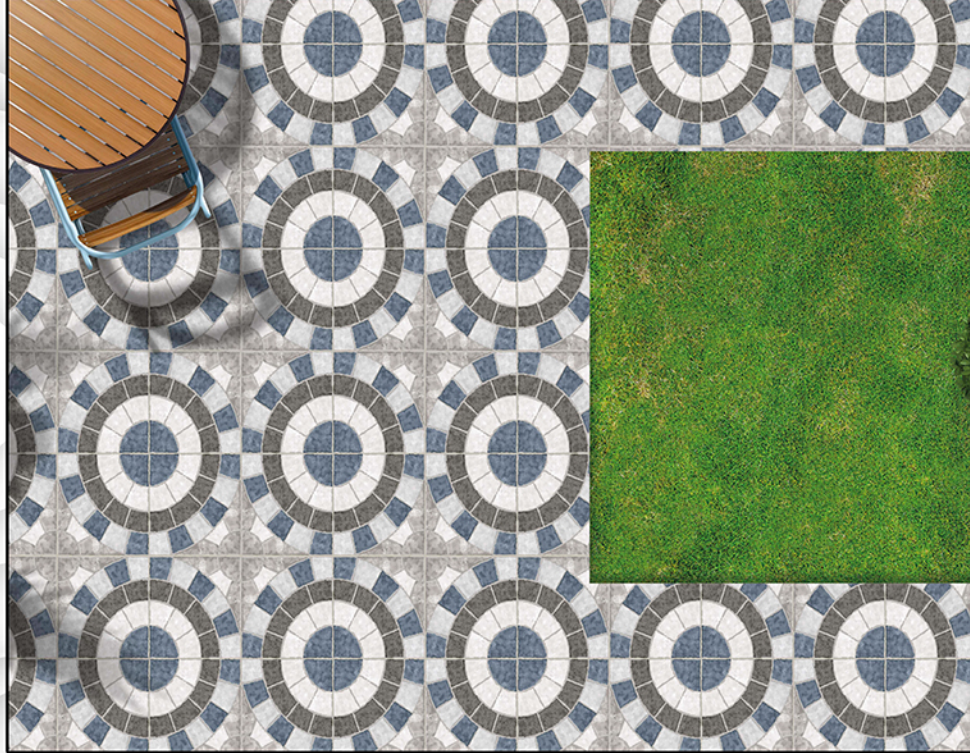



10-2004

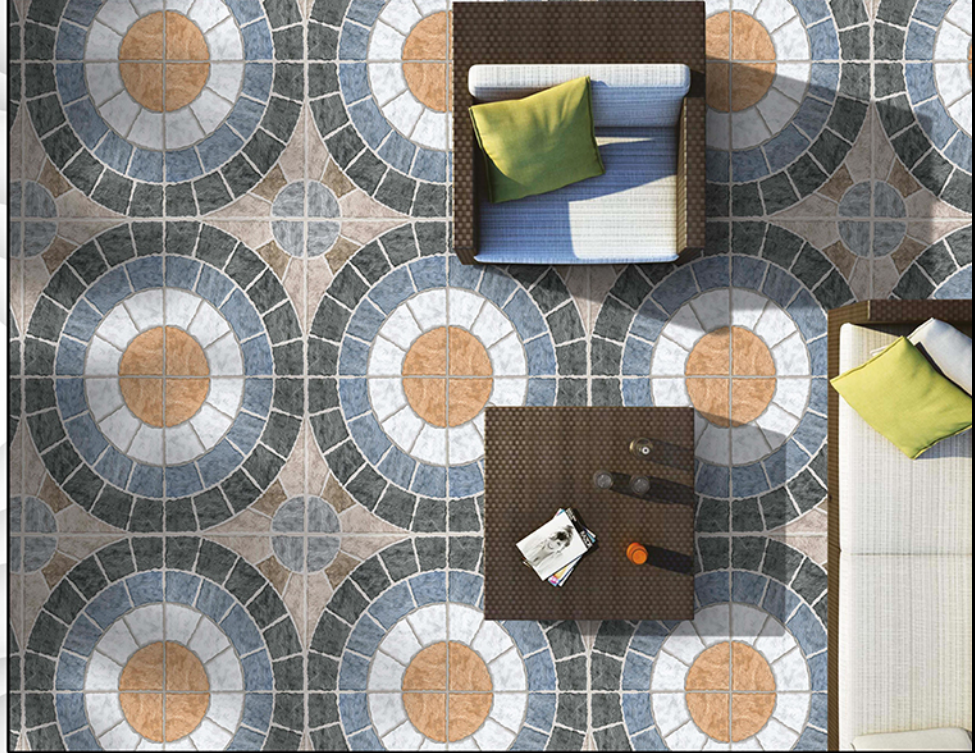



10-2005






10-2006





10-2007



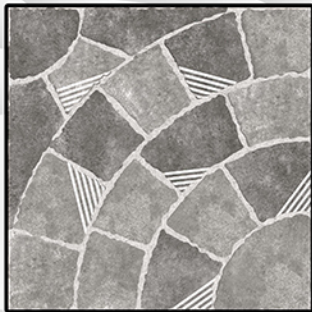


10-2008





10-2009



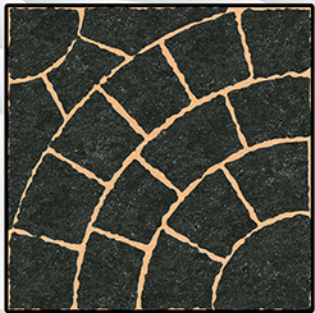


10-2010





10-2011



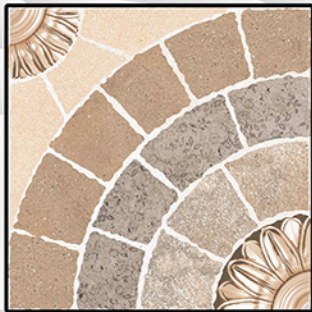

10-2012





10-2013





10-2014





10-2015





10-2016





10-2017





10-2018





10-2019





10-2020





10-2021



SIZE (In mm)	Packing	Coverage Area	Thickness	Box Wt. (Kgs)
400 x 400 mm Digital	5 Pcs.	0.80 sq. mtr.	12.0 mm	18 kg
500 x 500 mm Digital	3 Pcs.	0.75 sq. mtr.	12.0 mm	18 kg

TEN COMMANDMENTS FOR LAYING TILES.

- 1 Surface Should Be Cleaned Properly Before installation.
- 2 Tiles Should Be Segregated According To Batch O. & Manufacturing Date.
- 3 Dry fixing: lay the tiles in the desired patterns, shades and designs etc. before final laying.
- 4 Fixing by good quality tile-adhesive or with 1:4 cement & sand powder.
- 5 Use of 2 to 5 mm SPACERS is recommended.
- 6 Do not use an iron hammer or some heavy material to press the tile.
- 7 After 48 hours for bed curing, fill the joints with desired grouts.
- 8 Clean tiles with detergent power or soap.
- 9 Cover the surface with plastic sheet/POP until it becomes ready for use.
- 10 All design are sedise.

PERFORMANCE



Scratch proof



High Abrasion Resistance

High Thermal shock
Withstand Capability
From -60°C To +60°C

Stain Proof

High Breaking
Strength

High Density

Lowest Water
Absorption
~ 0.05 %Chemical and
Acid Resistant

APPLICATION



Airport



Toilets

IT Parks &
Software BuildingSuper Specialty
Hospitals

Railway stations

HI - Tech
Building Areas

Swimming Pools



Show Rooms



GLITERA

www.gliteraceramic.com