



GLITERA

HEAVY DUTY

OUTDOOR

VITRIFIED TILES

400 x 400 MM

Punch Series

www.gliteraceramic.com




11-2201





11-2202



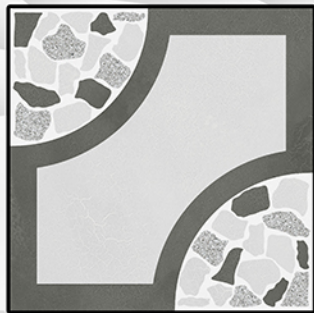

11-2203






11-2204







11-2205



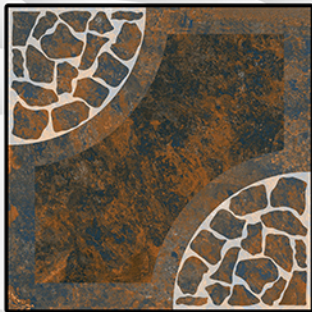



11-2206

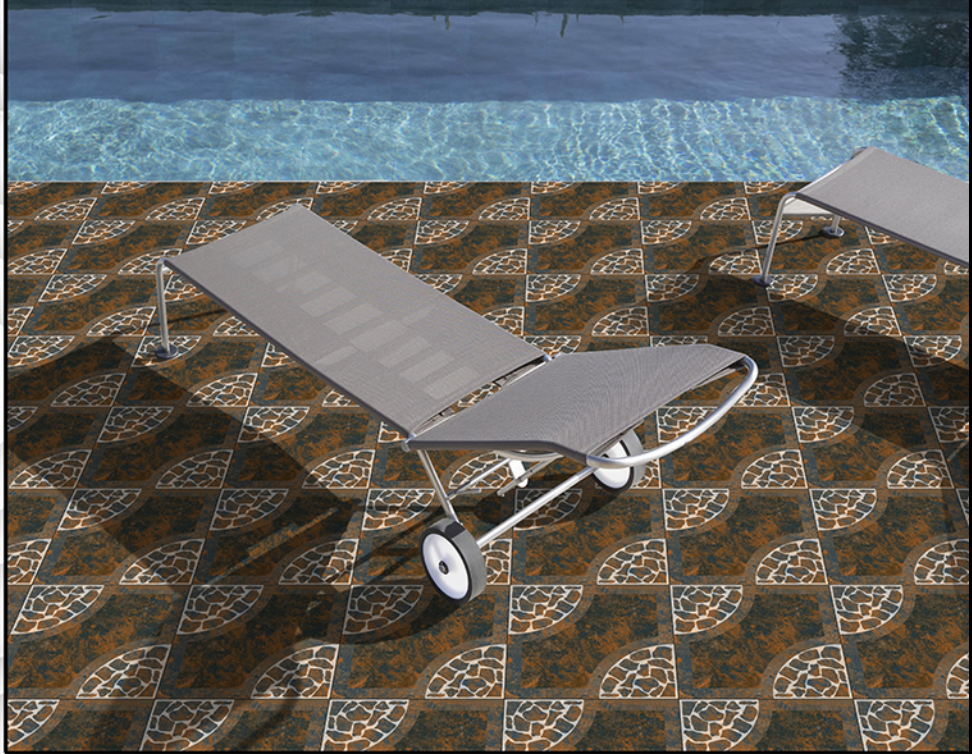

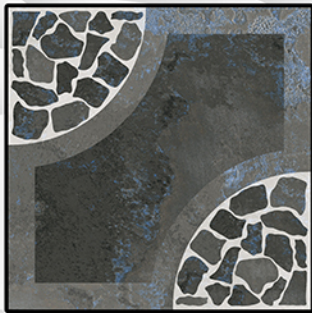


11-2207

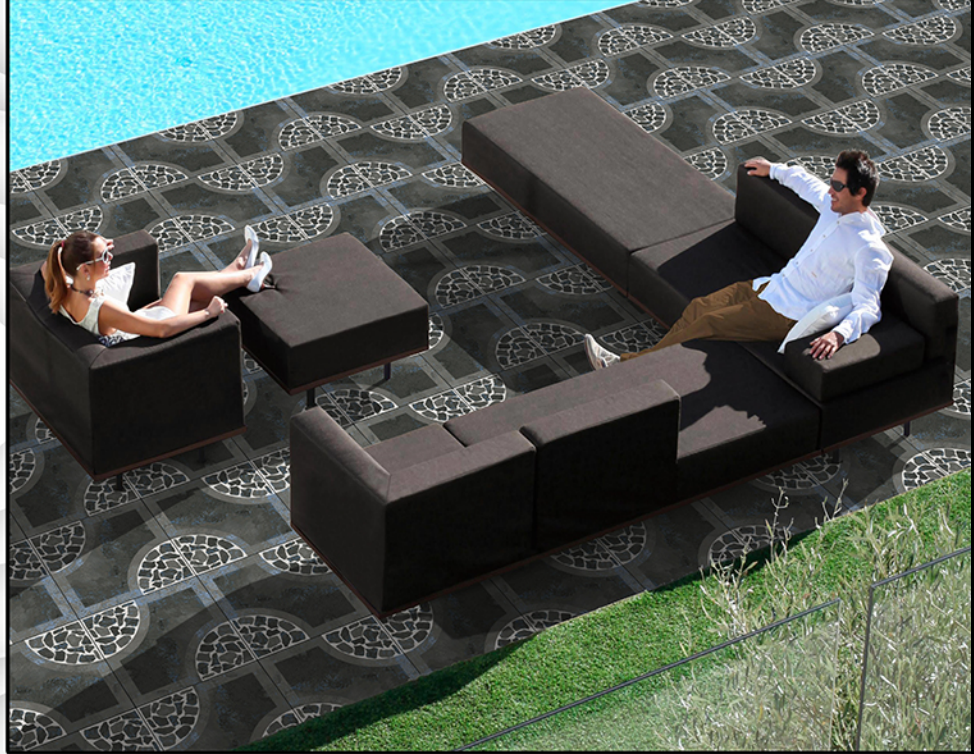

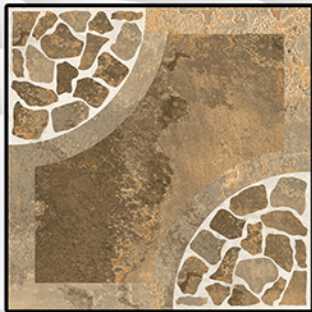


11-2208



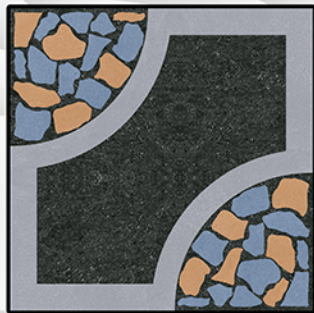


11-2209



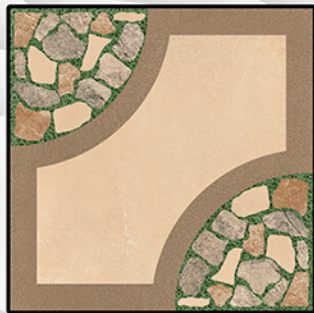

11-2210



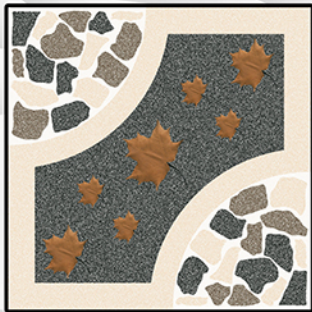


11-2211






11-2212



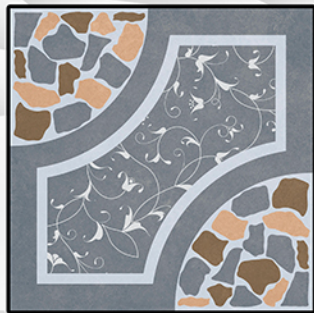

11-2213



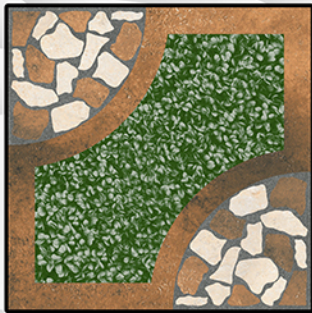



11-2214





11-2215

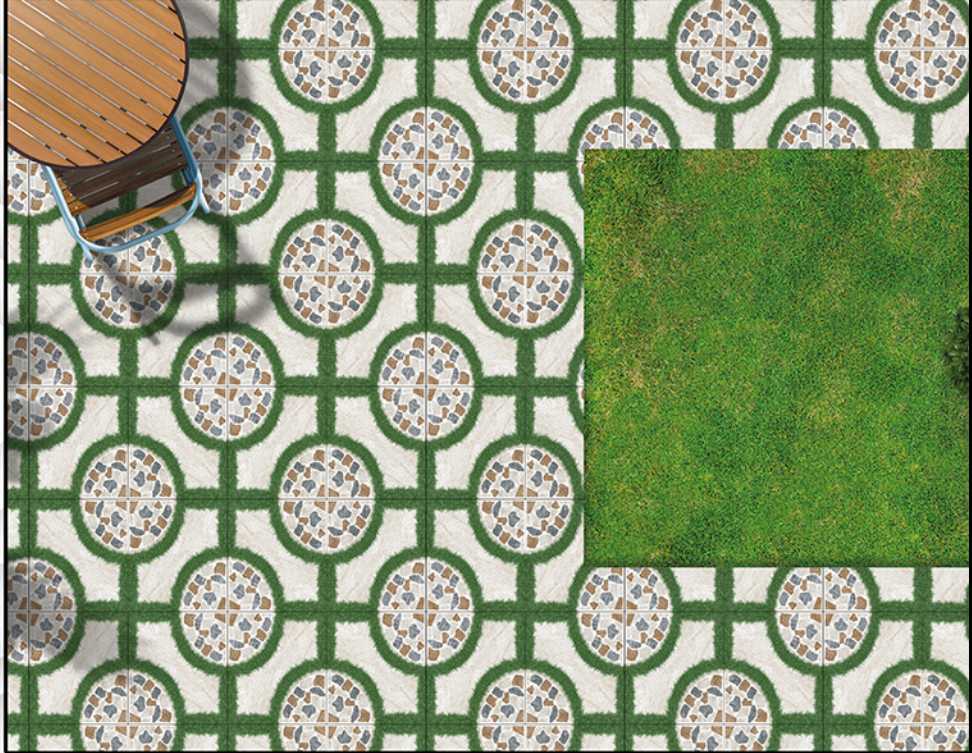

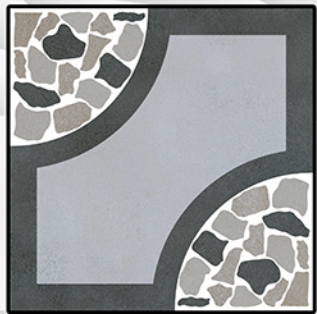


11-2216






11-2217



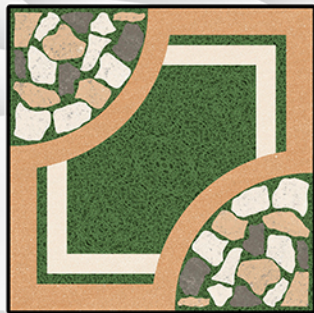

11-2218



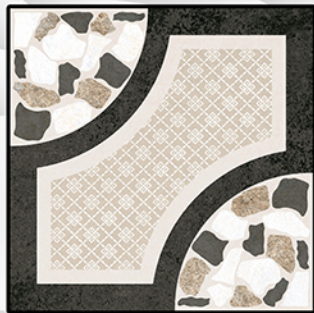

11-2219






11-2220





11-2221



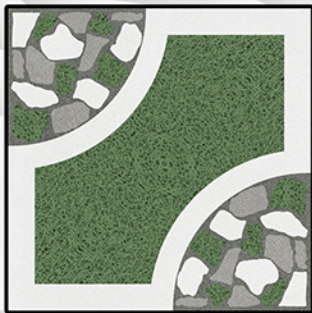

11-2222





11-2223





12-2301





12-2302





12-2303





12-2304





12-2305-R-1



12-2305-R-2



12-2305-R-3





12-2306-R-1



12-2306-R-2



12-2306-R-3





12-2307-R-1



12-2307-R-2



12-2307-R-3





12-2308-R-1




12-2308-R-2



12-2308-R-3



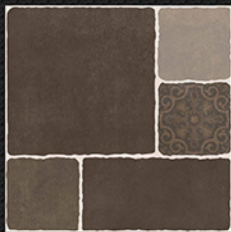

12-2309-R-1



12-2309-R-2




12-2309-R-3






13-2401



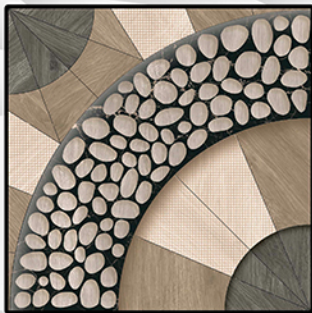


13-2402



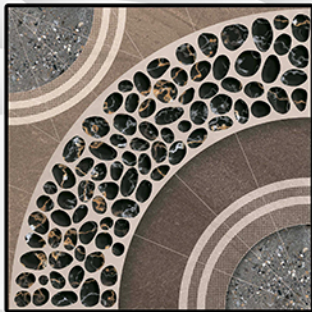



13-2403



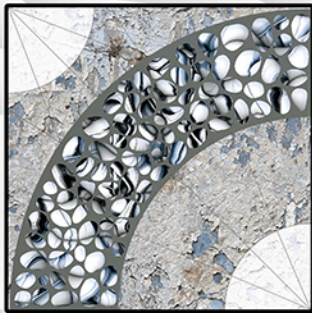


13-2404

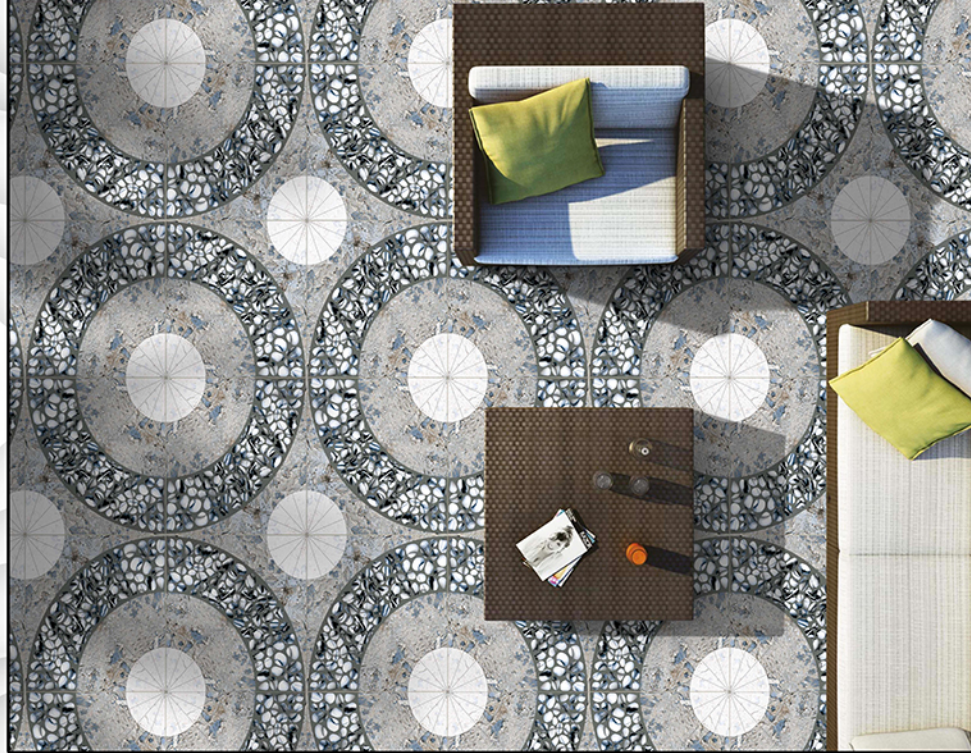

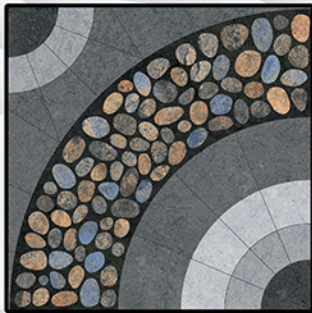


13-2405



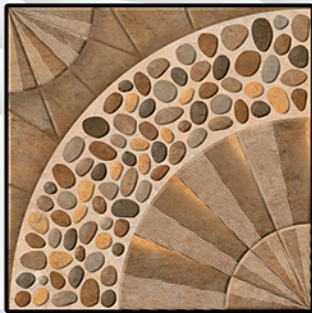


13-2406



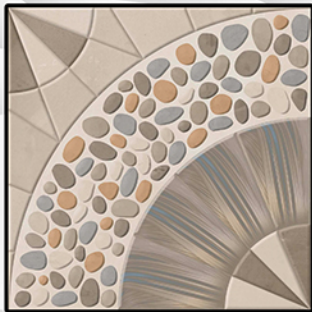

13-2407



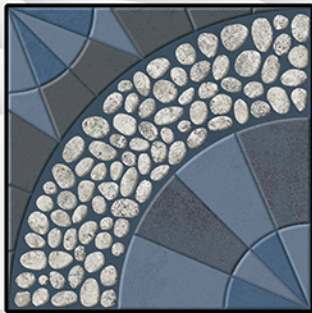


13-2408





14-2501



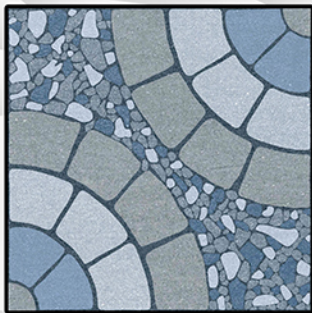


14-2502






14-2503



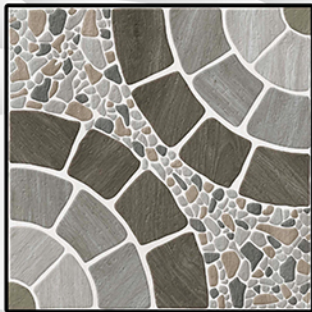


14-2504



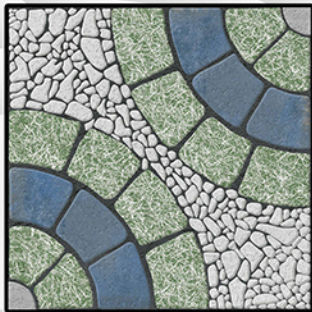


14-2505



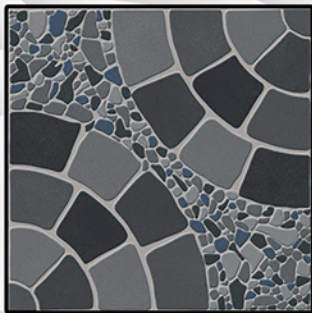


14-2506



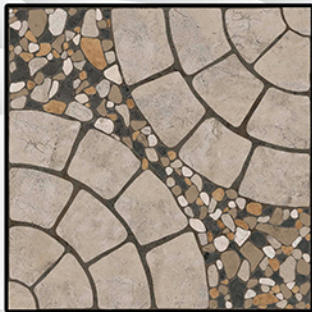

14-2507



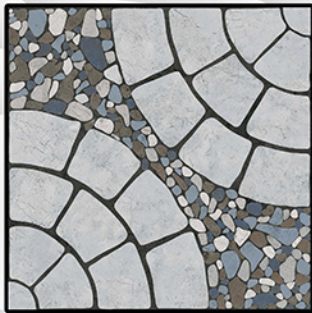


14-2508






14-2509



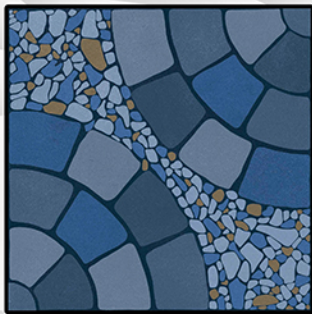


14-2510



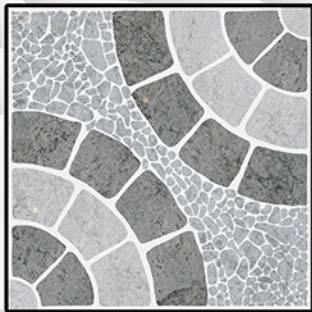

14-2511



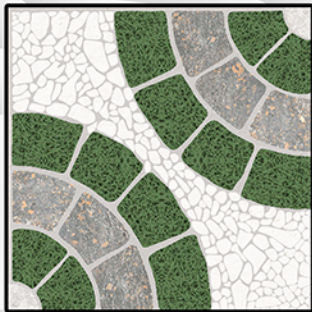


14-2512





14-2513



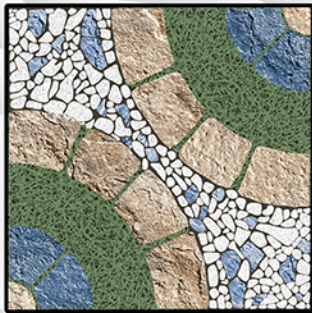


14-2514





14-2515



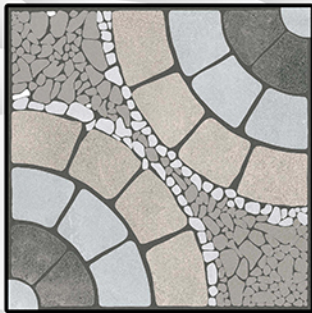

14-2516





14-2517



SIZE (In mm)	Packing	Coverage Area	Thickness	Box Wt. (Kgs)
400 x 400 mm Digital	5 Pcs.	0.80 sq. mtr.	12.0 mm	18 kg
500 x 500 mm Digital	3 Pcs.	0.75 sq. mtr.	12.0 mm	18 kg

TEN COMMANDMENTS FOR LAYING TILES.

- 1 Surface Should Be Cleaned Properly Before installation.
- 2 Tiles Should Be Segregated According To Batch O. & Manufacturing Date.
- 3 Dry fixing: lay the tiles in the desired patterns, shades and designs etc. before final laying.
- 4 Fixing by good quality tile-adhesive or with 1:4 cement & sand powder.
- 5 Use of 2 to 5 mm SPACERS is recommended.
- 6 Do not use an iron hammer or some heavy material to press the tile.
- 7 After 48 hours for bed curing, fill the joints with desired grouts.
- 8 Clean tiles with detergent power or soap.
- 9 Cover the surface with plastic sheet/POP until it becomes ready for use.
- 10 All design are sedise.

PERFORMANCE



Scratch proof



High Abrasion Resistance

High Thermal shock
Withstand Capability
From -60°C To +60°C

Stain Proof

High Breaking
Strength

High Density

Lowest Water
Absorption
~ 0.05 %Chemical and
Acid Resistant

APPLICATION



Airport



Toilets

IT Parks &
Software BuildingSuper Specialty
Hospitals

Railway stations

HI - Tech
Building Areas

Swimming Pools



Show Rooms



GLITERA

www.gliteraceramic.com