



GLITERA

HEAVY DUTY

OUTDOOR

VITRIFIED TILES

400 x 400 MM


Punch Series

www.gliteraceramic.com




04-1401



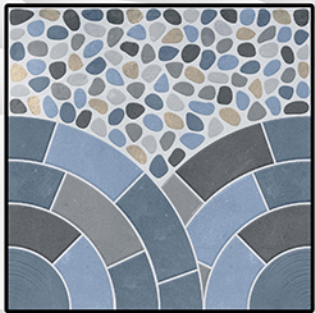

04-1402



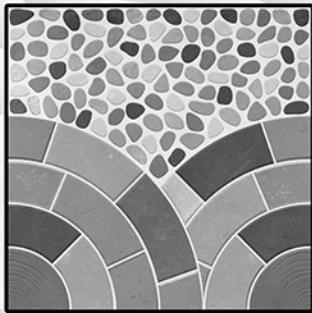


04-1403






04-1404



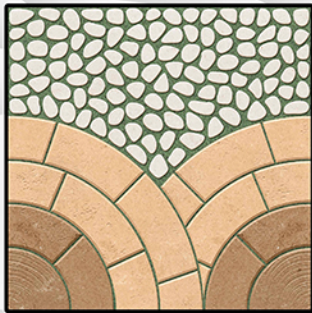

04-1405

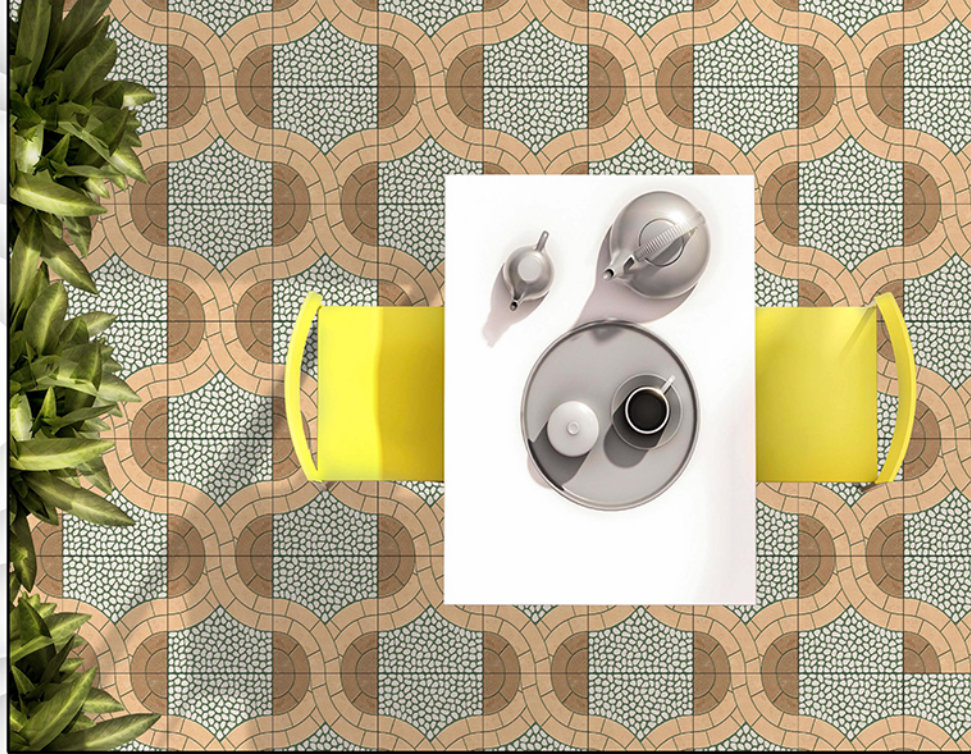




04-1406





04-1407

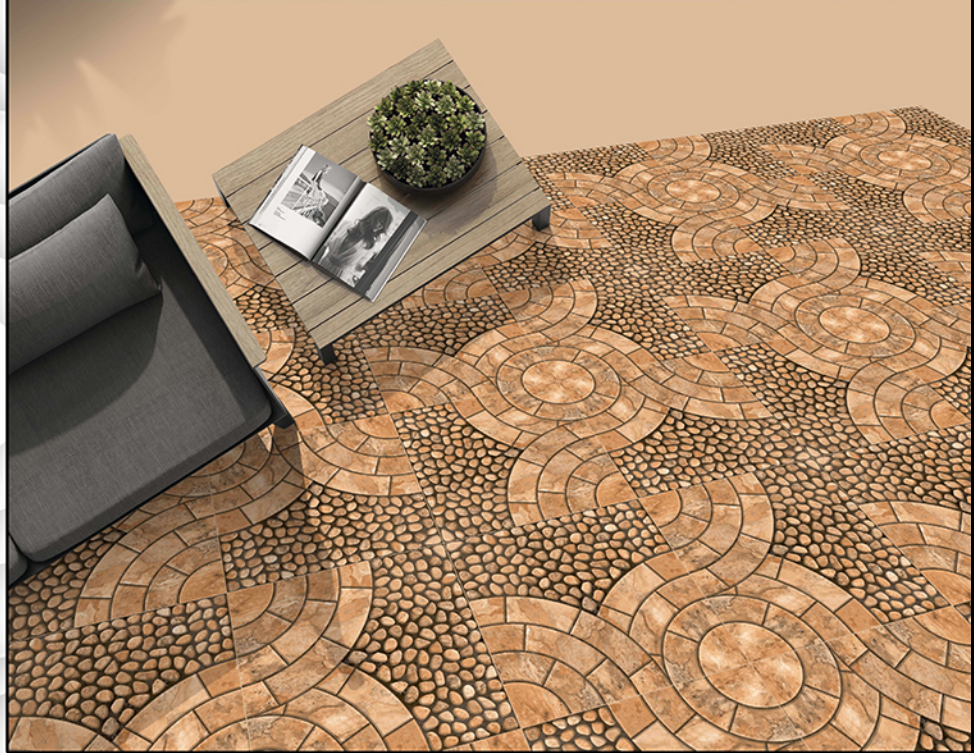



04-1408





04-1409





04-1410





04-1411





04-1412






05-1501






05-1502



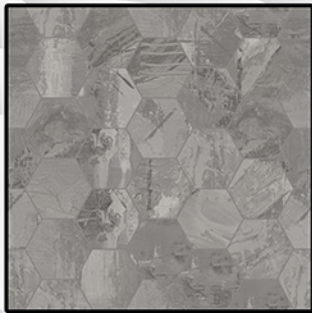


05-1503



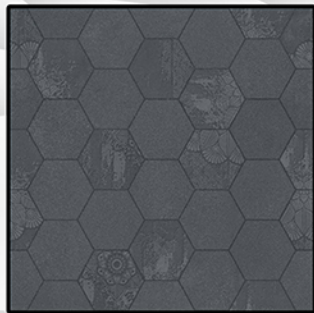


05-1504



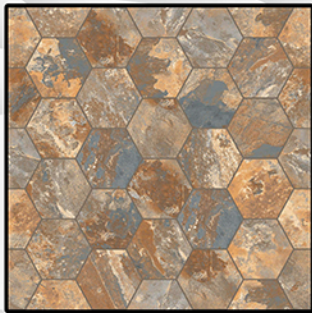

05-1505



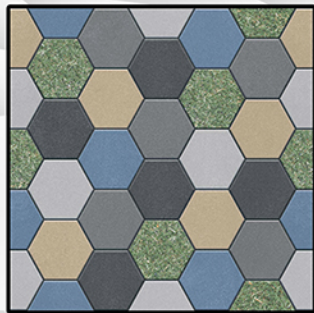

05-1506





05-1507





05-1508





05-1509






05-1510






05-1511



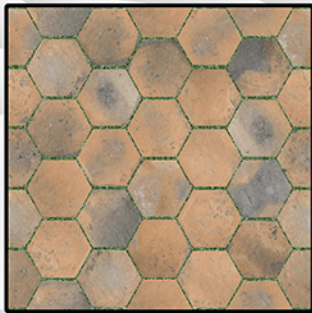

05-1512



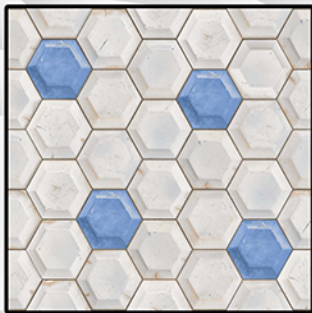


05-1513





05-1514

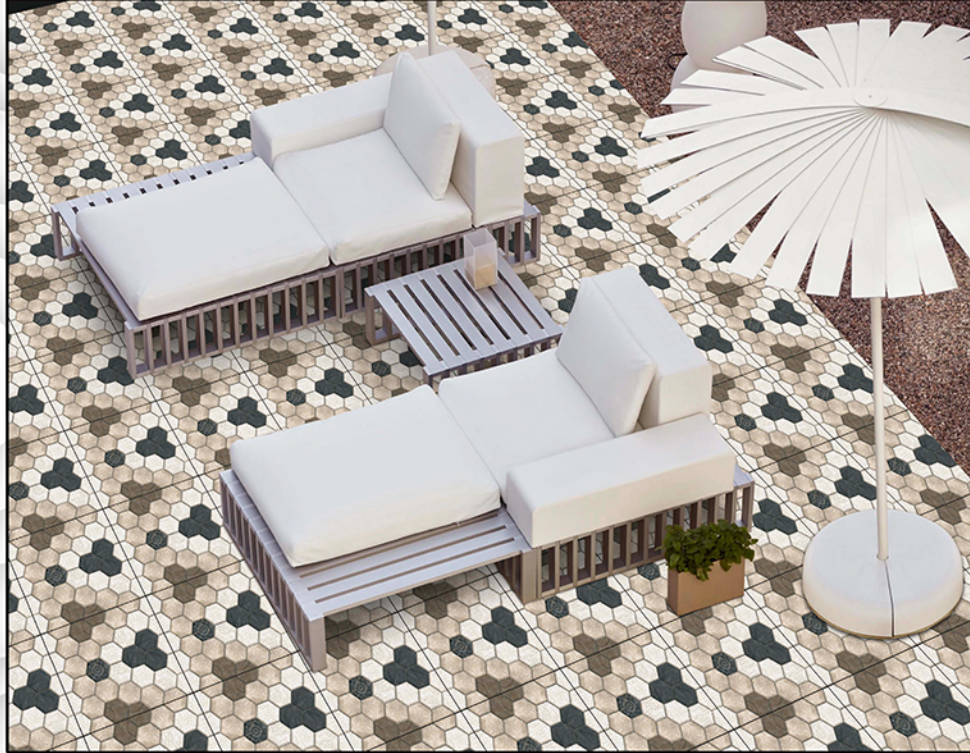




05-1515





05-1516



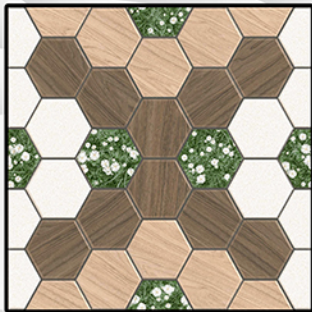



05-1517





05-1518

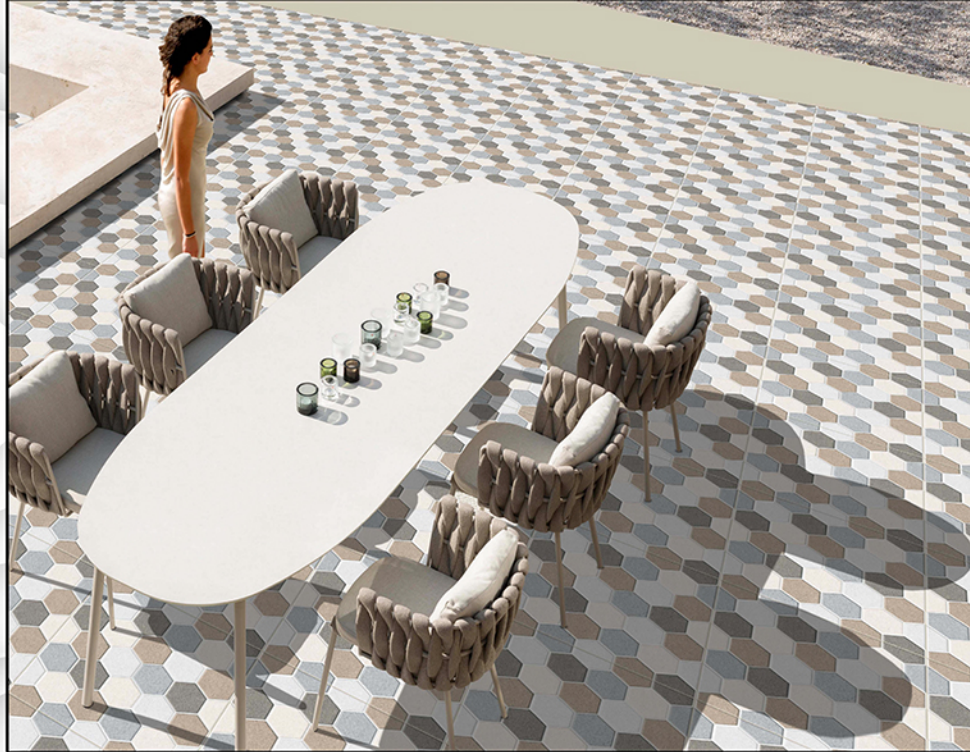

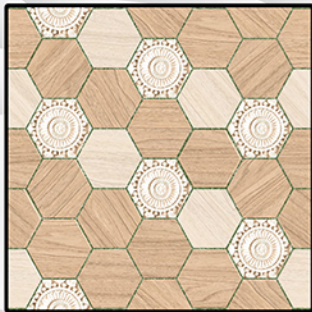


05-1519






05-1520



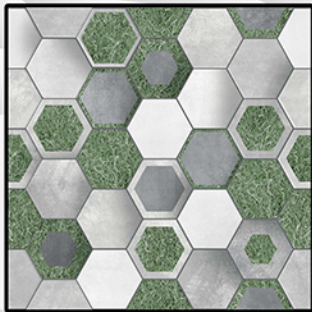


05-1521



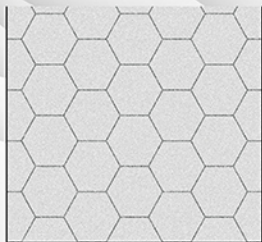


05-1522-LT

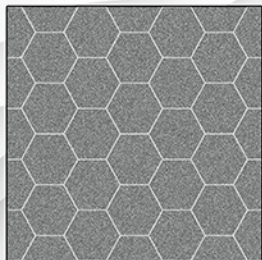


05-1522-DK



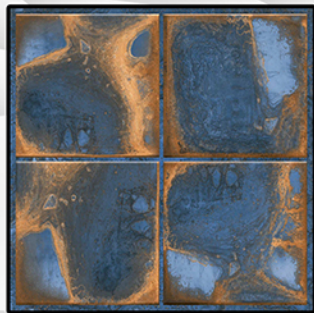


06-1601



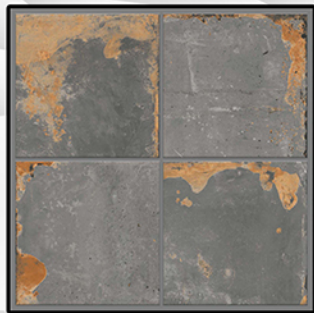


06-1602



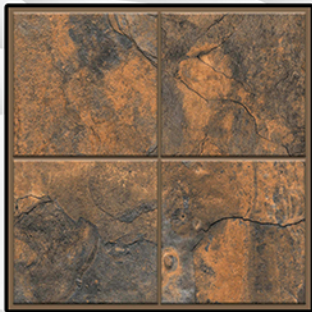

06-1603



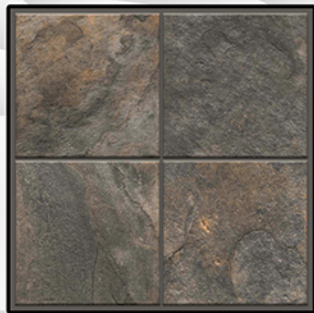

06-1604





06-1605





06-1606







06-1607






06-1608

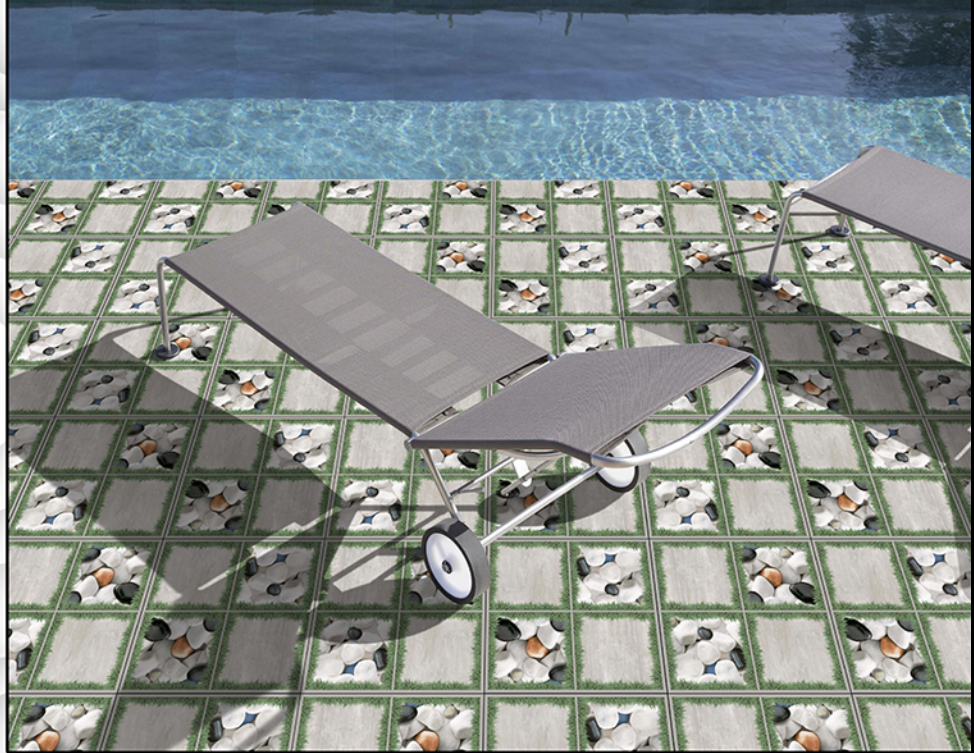

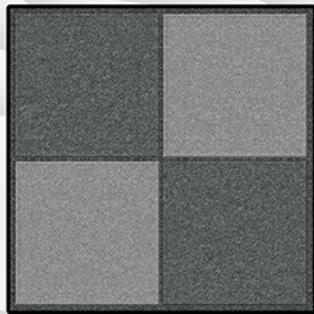

06-1609

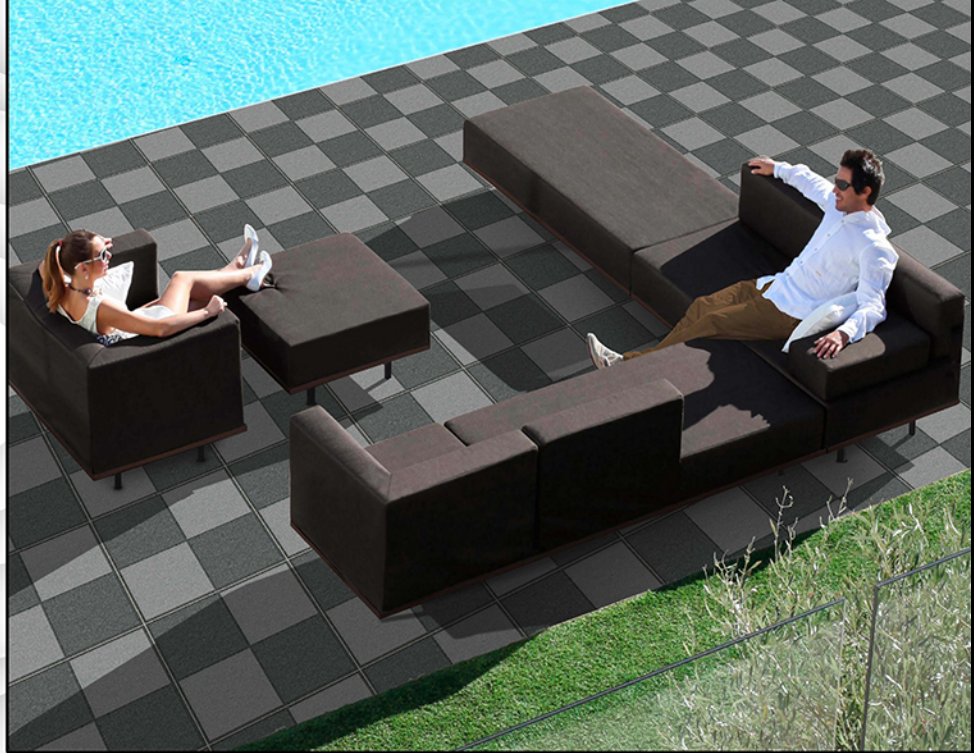




06-1610





06-1611



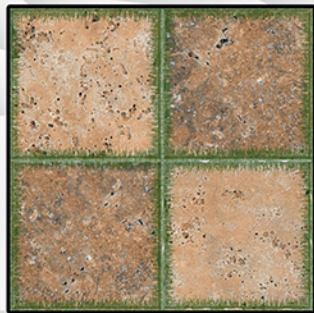


06-1612





06-1613



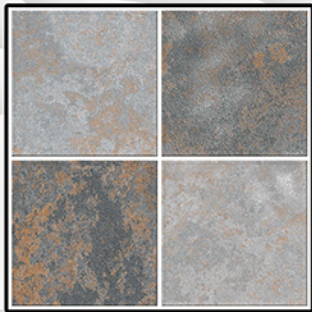


06-1614





06-1615



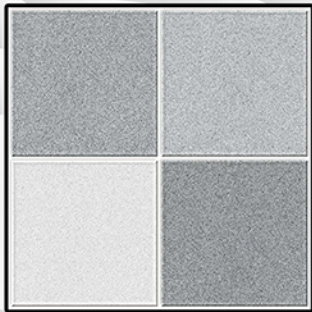

06-1616





06-1617






06-1618





06-1619



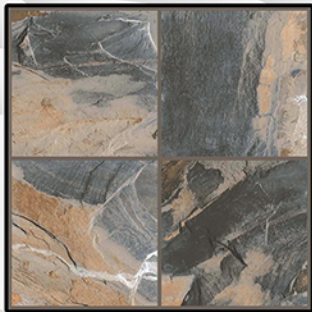

06-1620





06-1621





06-1622






06-1623







06-1624



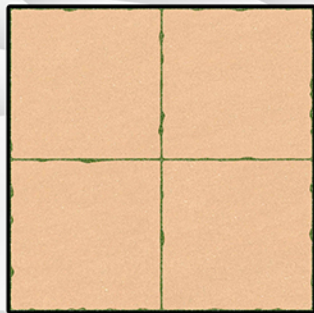

06-1625

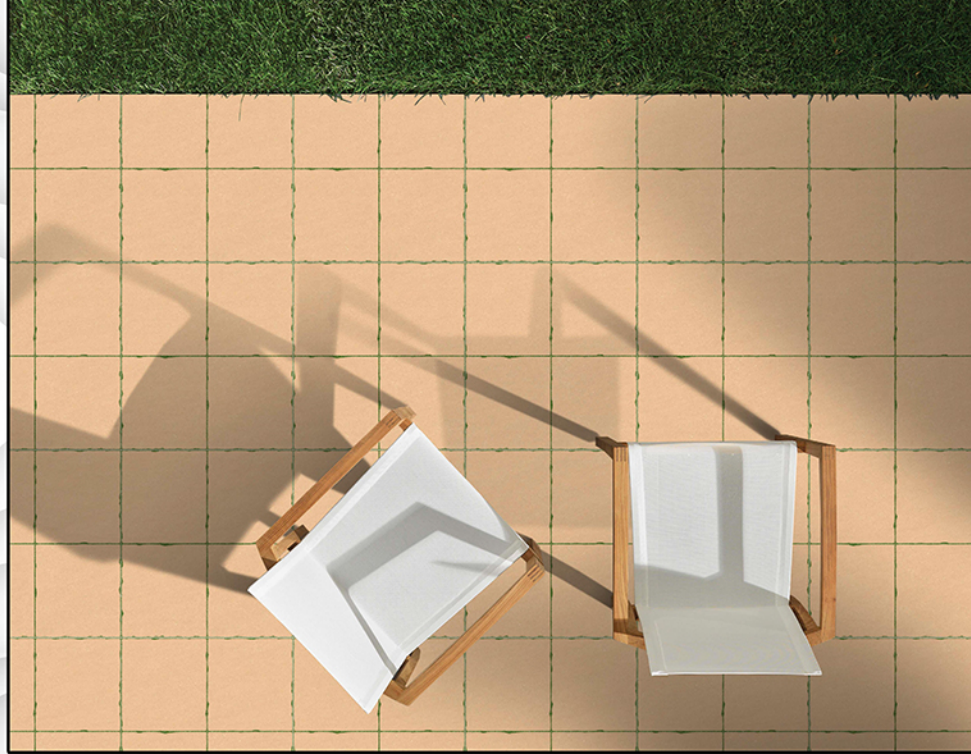

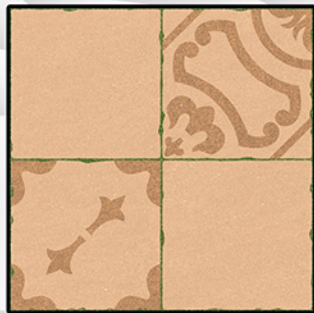

06-1626





06-1627





06-1628





06-1629






06-1630






06-1631

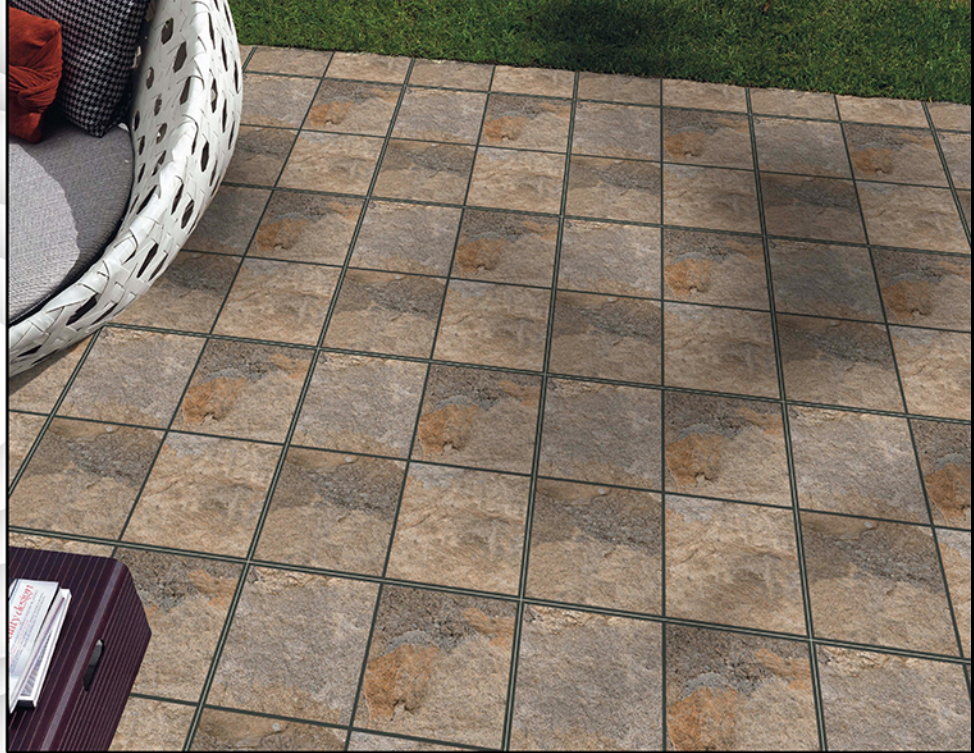



06-1632

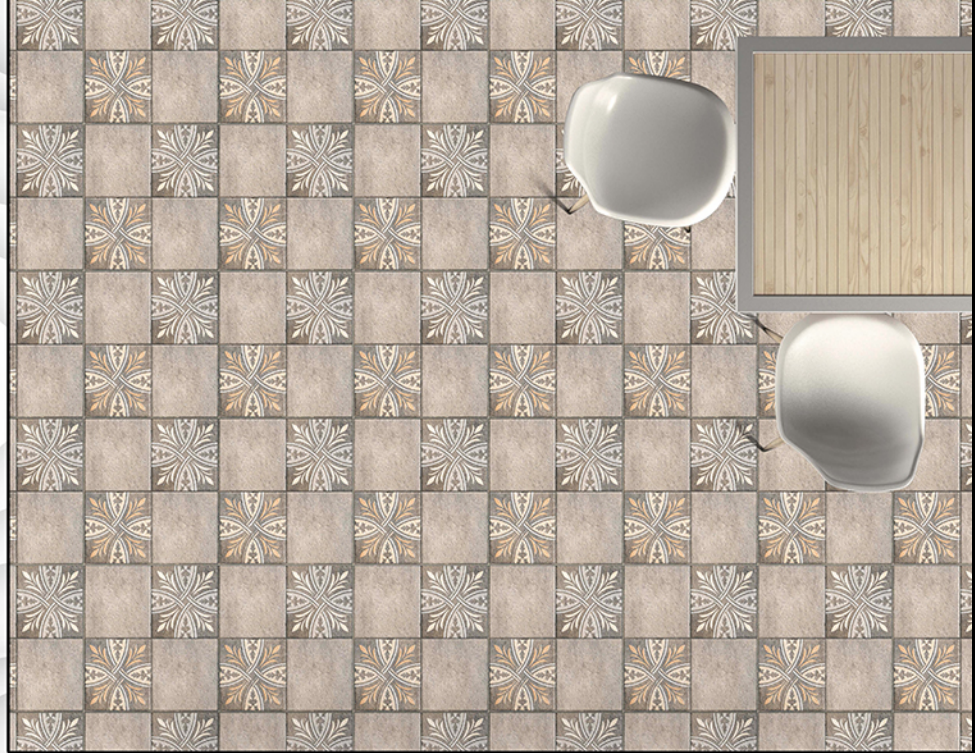

SIZE (In mm)	Packing	Coverage Area	Thickness	Box Wt. (Kgs)
400 x 400 mm Digital	5 Pcs.	0.80 sq. mtr.	12.0 mm	18 kg
500 x 500 mm Digital	3 Pcs.	0.75 sq. mtr.	12.0 mm	18 kg

TEN COMMANDMENTS FOR LAYING TILES.

- 1 Surface Should Be Cleaned Properly Before installation.
- 2 Tiles Should Be Segregated According To Batch O. & Manufacturing Date.
- 3 Dry fixing: lay the tiles in the desired patterns, shades and designs etc. before final laying.
- 4 Fixing by good quality tile-adhesive or with 1:4 cement & sand powder.
- 5 Use of 2 to 5 mm SPACERS is recommended.
- 6 Do not use an iron hammer or some heavy material to press the tile.
- 7 After 48 hours for bed curing, fill the joints with desired grouts.
- 8 Clean tiles with detergent power or soap.
- 9 Cover the surface with plastic sheet/POP until it becomes ready for use.
- 10 All design are sedise.

PERFORMANCE



Scratch proof



High Abrasion Resistance

High Thermal shock
Withstand Capability
From -60c To +60c

Stain Proof

High Breaking
Strength

High Density

Lowest Water
Absorption
~ 0.05 %Chemical and
Acid Resistant

APPLICATION



Airport



Toilets

IT Parks &
Software BuildingSuper Specialty
Hospitals

Railway stations

HI - Tech
Building Areas

Swimming Pools



Show Rooms



GLITERA

www.gliteraceramic.com